MODEL: BGTS-2MN
TWO-MAN TRIPOD

- **Do Not Over Tighten Fasteners**
- **WEIGHT LIMIT: 500 lbs for two people and equipment or 300 lbs for one person and equipment.**

Instruction and Safety Manual

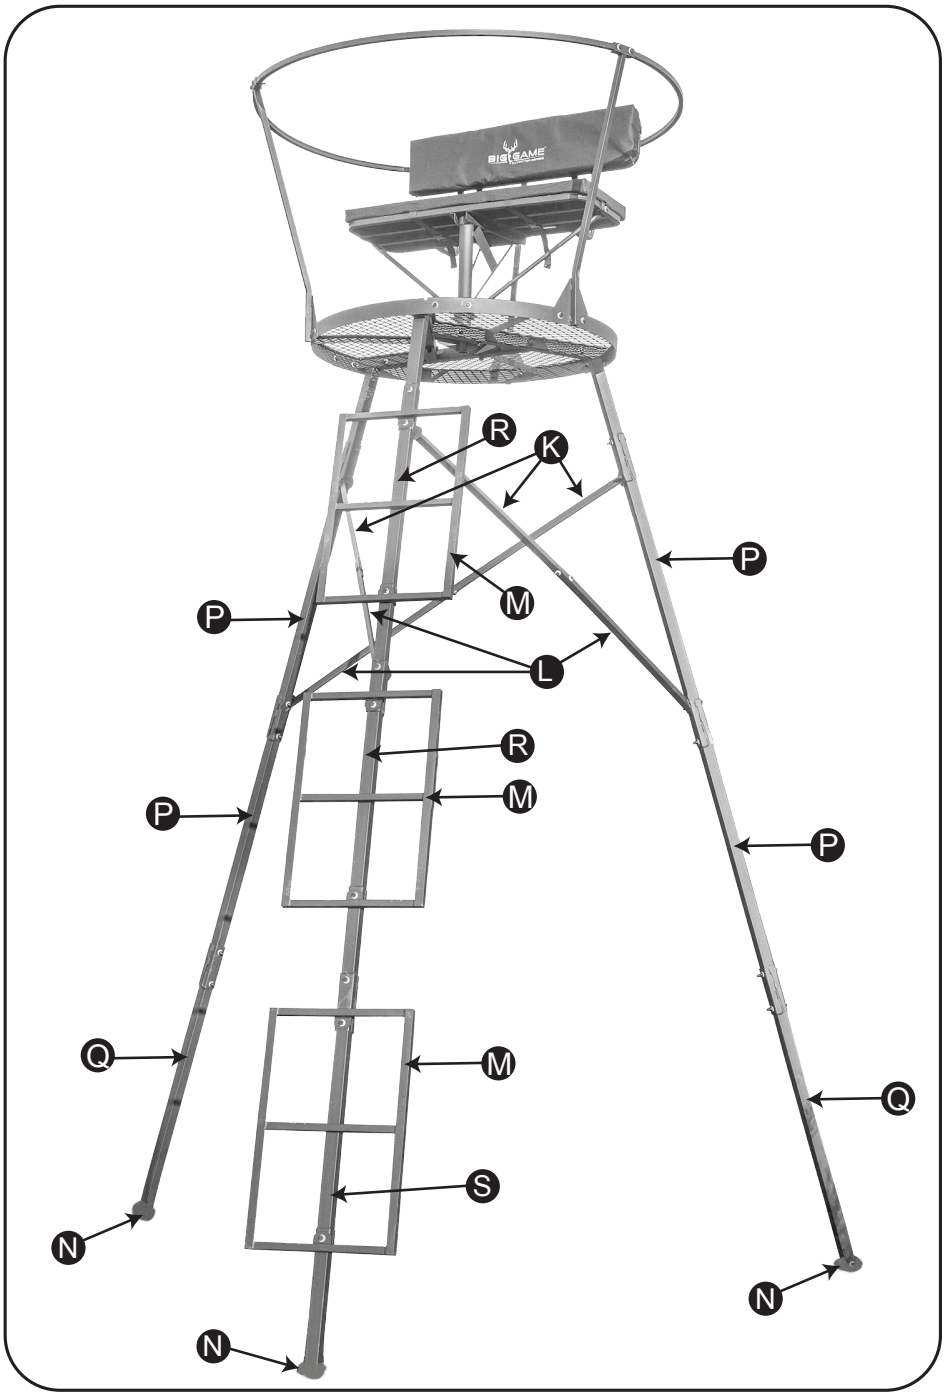

⚠ WARNING

Every year serious injury and death can occur from hunting related accidents. To ensure your safety, please **COMPLETELY** read and follow this safety manual and **ALL** warning labels **BEFORE** assembling, installing or utilizing this product.

DO NOT USE THIS PRODUCT BEFORE FULLY UNDERSTANDING ALL SAFETY WARNINGS AND INSTRUCTIONS. IF YOU HAVE QUESTIONS, ARE UNSURE ABOUT ANY INFORMATION OR NEED ADDITIONAL INFORMATION CONCERNING YOUR PRODUCT, CONTACT OUR CUSTOMER SERVICE DEPARTMENT AT1-866-972-6168 OR VISIT **PRIMALVANTAGE.COM/BIG-GAME.** KEEP AND MAINTAIN THIS SAFETY AND INSTRUCTION MANUAL IN A SAFE LOCATION FOR FUTURE REFERENCE.

Distributed by Primal Vantage Company Inc., 2407 W. Euclid Ave., Littleton, CO 80120

©2018 (rev. 3/18)

SAFETY MUST BE YOUR FIRST PRIORITY WITH THIS PRODUCT

TRIPOD SAFETY WARNINGS

Please read the following instruction manual and warnings labels completely before utilizing this product. Failure to understand and execute the instructions and warnings may result in serious injury or death. In the event of an accident, have a plan for rescue, including the use of devices that may be easily reached while suspended.

ALWAYS read and understand all warnings and instructions including assembly, installation etc., before each use of this product. Failure to read and understand all warnings and instructions may result in serious injury or death. Contact a Customer Service Representative with any questions you may have.

NEVER exceed total weight limit of **500 lbs for two people and equipment or 300lbs. for one person and equipment**. **DO NOT** use if the combined weight of one person with all of their hunting gear and any accessories exceeds **300 lbs.** or **if** the combined weight of two people and equipment exceeds **500 lbs.** Use of tree stand over the weight limit may result in serious injury or death.

DO NOT use this tripod while under the influence of alcohol, medication or any illegal substances. Use of tripod while under the influence of any of these substances may result in serious injury or death.

NEVER use this tripod during inclement weather. **DO NOT** use this tripod during thunderstorms, snowstorms, hurricanes, tornadoes or any other weather conditions that include (but not limited to) lightning, icy conditions, or high winds that could create slippery or dangerous situations. End your hunt and return to the ground if inclement weather conditions arise.

NEVER use this tripod If you are feeling ill, nauseous, dizzy or if you have a prior condition that could cause a problem. i.e., heart condition, joints that lock-up spinal fusions, etc., or if you are not well rested and alert. Physical ailments can reduce your ability to safely install, utilize, and remove your treestand. Please consult a physician prior to use.

NEVER use this tripod if you have a history of health problems such as (but not limited to) heart problems, back problems, high blood pressure, impaired vision, equilibrium impairments, are afraid of heights, have been advised by a doctor or physician not to climb. If you are not physically fit, well rested, and alert, or if you have any other physical or mental condition that would impair your ability to properly use this treestand.

NEVER jump or bounce on the tripod's platform or ladder sections. Instead, step firmly on the first rung of the bottom ladder section to set the ladder into the ground before proceeding to climb the ladder.

NEVER transport any of your equipment with yourself while ascending or descending the ladder. You will need to have two hands free during ascending and descending for safety. Use a haul line to pull up your firearm (unloaded, chamber opened with safety lock engaged, barrel facing towards the ground), bows, arrows, knives or any other equipment to your tripod once you have reached your desired hunting height. Prior to descending, lower your equipment on the opposite side of the tripod from which you are climbing. Make sure that the unloaded firearm's safety lock is engaged and the gun barrel is pointing towards the ground.

ALWAYS hunt with a plan and a buddy. Before you leave home, let others know your exact location, when you plan to return and who is with you.

ALWAYS carry emergency signal devices such as a cell phone, walkie-talkie, whistle, signal flare, PLD (personal location device) and flashlight with you at all times and within reach even while you are suspended in your harness. Watch for changing weather conditions. In the event of an accident, remain calm and seek help immediately.

ALWAYS inspect the tripod for signs of wear or damage **BEFORE** each use. Also inspect to ensure that nuts and bolts are secure. Destroy all products that cannot be repaired by the manufacturer. Contact a Customer Service Representative for replacement parts.

NEVER modify your tripod in any way by making repairs, replacing parts, or altering, adding or attaching anything to it except if explicitly authorized in writing by the manufacturer. Improper installation or adjustment may cause serious injury or death. Remove all contents from box. Inspect for any damaged or missing parts. If any parts are missing or damaged, you must only use certified replacement parts. Using any other replacement parts will void product warranty. **THERE ARE NO EXTRA PARTS**. All parts **MUST** be used to ensure the safety of you and your stand. If you think parts are missing or damaged, **STOP IMMEDIATELY** and contact our Customer Service Department. Using the tripod with missing or damaged parts may result in serious injury or death. **DO NOT** return this product to the retailer. Contact a Customer Service Representative if you have any missing, damaged or extra parts.

ALWAYS keep instructions in a safe place and review before each use. It is the responsibility of the tripod owner to furnish the complete instructions to anyone who borrows or purchases the treestand from you.

PRIMAL VANTAGE CO.

Distributed by Primal Vantage Company Inc., 2407 W. Euclid Ave., Littleton, CO 80120

©2018 (rev. 3/18)

TRIPOD SAFETY WARNINGS

NEVER use this tripod for any use other than hunting.

NEVER use this tripod for trimming trees.

NEVER fall asleep in your stand as you may fall out resulting in serious injury or death.

ALWAYS be sure to retighten all bolts **BEFORE** each new use of this tripod.

ALWAYS have a minimum of three people present when installing or removing this tripod.

NEVER adjust your stand while in use.

ALWAYS inspect every ladder section connection every time you use the stand before you leave the ground. If ladder sections are separating, with the help of at least two other people, lower the stand to the ground, make adjustments, and reinstall.

ALWAYS check the ground below the tripod to make sure it is firm and level. Sloping ground or uneven terrain (one side of a rock or root) can cause your tripod to tilt or shift.

ALWAYS maintain three points of contact when climbing the tripod. (Two feet and one hand ***or*** one foot and two hands.)

DO NOT leave your tripod outside since weather or animals may cause damage. It must be stored inside when not in use.

NEVER wear jewelry or loose fitting clothing, which can cause hazardous conditions. Clothing may be caught in your equipment and cause you to fall. You must always wear non-slip or rubber boots. Shoelaces must be tucked into your boots. Rings and necklaces **MUST NOT** be worn.

NEVER use this tripod with a third person. The tripod is designed for use by **ONE** person or **TWO** people.

NEVER let children use this tripod without adult supervision. This tripod is not a toy. No one under the age of 18 should attempt to use this product without direct adult supervision.

DO NOT use this tripod if any nuts or bolts or parts are loose, bent, or crooked.

ALWAYS lean ***forward towards the ladder*** as you climb **NEVER** lean out from the tripod for any reason.

Be aware that falls can occur at anytime after leaving the ground.

NEVER remove any safety warning stickers from this product.

Safety must be your first priority during the use of this product.

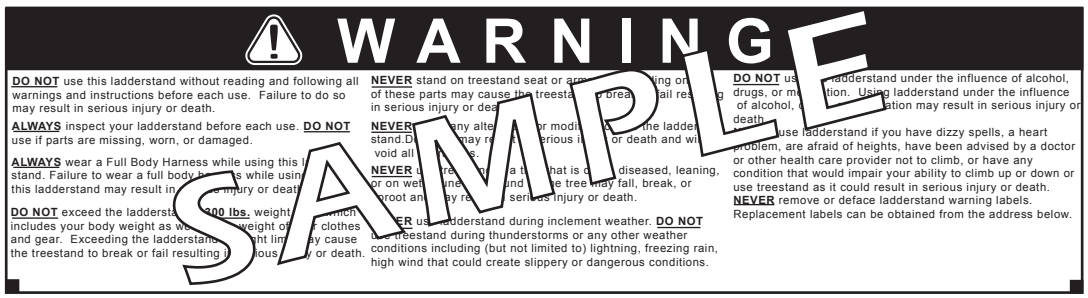

PRIMAL VANTAGE CO.

Distributed by Primal Vantage Company Inc., 2407 W. Euclid Ave., Littleton, CO 80120

©2018 (rev. 3/18)

2018

MODEL: BGTS-2MN
TWO-MAN TRIPOD

- **Do Not Over Tighten Fasteners**
- **WEIGHT LIMIT: 500 lbs for two people and equipment or 300 lbs. for one person and equipment.**

BIG GAME OUTFITTER SERIES

A Foot Platform (3)

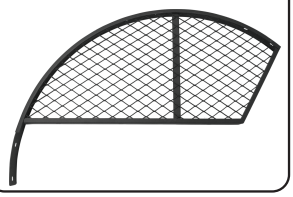

B Platform Support (3)

C Seat Pedestal (1)

D Shooting Rail Support (3)

E Shooting Rail (3)

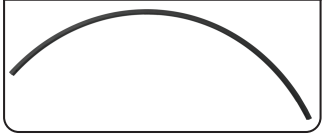

F Seat Support Bar (2)

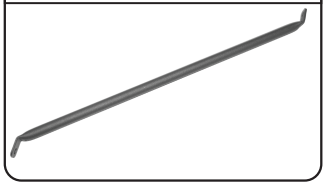

G Seat Platform (1)

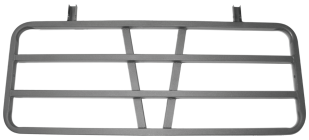

H Backrest (1)

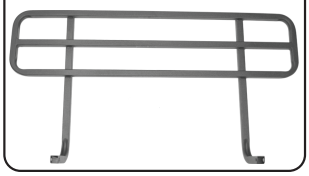

J Seat Post (1)

K Upper Cross Brace (3)

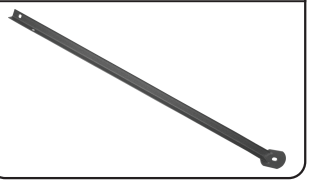

L Lower Cross Brace (3)

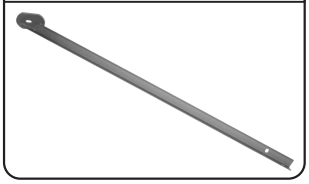

M Ladder (3)

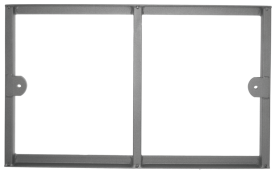

N Foot (3)

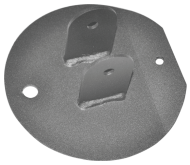

O Chain (3)

P Rear Leg (4)

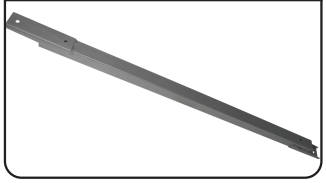

Q Bottom Rear Leg (2)

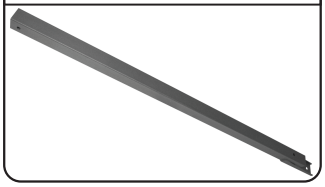

R Ladder Leg (2)

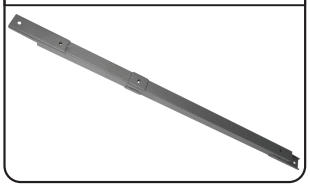

S Bottom Ladder Leg (1)

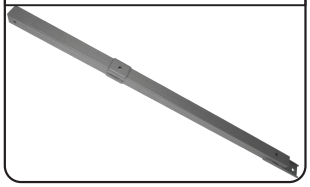

Tools Required
Adjustable Wrench

T Backrest Cushion (1)

U Seat Cushion (1)

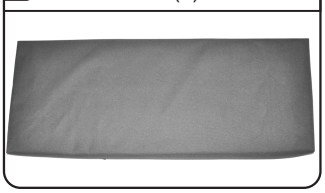

V Anchor Pin (3)

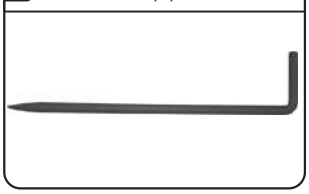

PARTS LIST

A	3	Foot Platform	Part # BFP-900
B	3	Platform Support	Part # BPS-900
C	1	Seat Pedestal	Part # BSP-900
D	3	Shooting Rail Support	Part # BSRS-900
E	3	Shooting Rail	Part # BSR-900
F	2	Seat Support	Part # BSS-900
G	1	Seat Platform	Part # BSP-900
H	1	Backrest	Part # BBR-900
J	1	Seat Post	Part # BSP-910
K	3	Upper Cross Brace	Part # BCB-900
L	3	Lower Cross Brace	Part # BCB-910
M	3	Ladder	Part # BL-900
N	3	Leg Foot	Part # BLF-900
O	3	Chain	Part # BC-900
P	4	Rear Leg	Part # BLG-900
Q	2	Lower Rear Leg	Part # BLG-910
R	2	Ladder Leg	Part # BLG-920
S	1	Lower Ladder Leg	Part # BLG-930
T	1	Backrest Cushion	Part # BBC-900
U	1	Seat Cushion	Part # BSC-900
V	3	Anchor Pin	Part # BAP-600

HARDWARE BOX P/N 900H

65a	3 M16x65mm Bolt No Nut	Part # 1665a
65	9 M16x65mm Bolt	Part # 1665
65	24 M12x65mm Bolt	Part # 1265
40	4 M12x40mm Bolt	Part # 1240
35	6 M12x35mm Bolt	Part # 1235
20	12 M12x20mm Bolt	Part # 1220
25	3 M10x25mm Bolt	Part # 1025
20	10 M10x20mm Bolt	Part # 1020
	2 M10 Nut	Part # 1000

PRIMAL VANTAGE CO.

©2018 (rev. 3/18)

2018

Distributed by Primal Vantage Company Inc., 2407 W. Euclid Ave., Littleton, CO 80120

ALL PHOTOS TAKEN FROM FRONT VIEW UNLESS OTHERWISE NOTED

Remove all contents from packaging and make sure all parts are present before attempting to assemble.

Tighten all bolt connections by hand first and then when fully assembled, go back and tighten with a wrench.

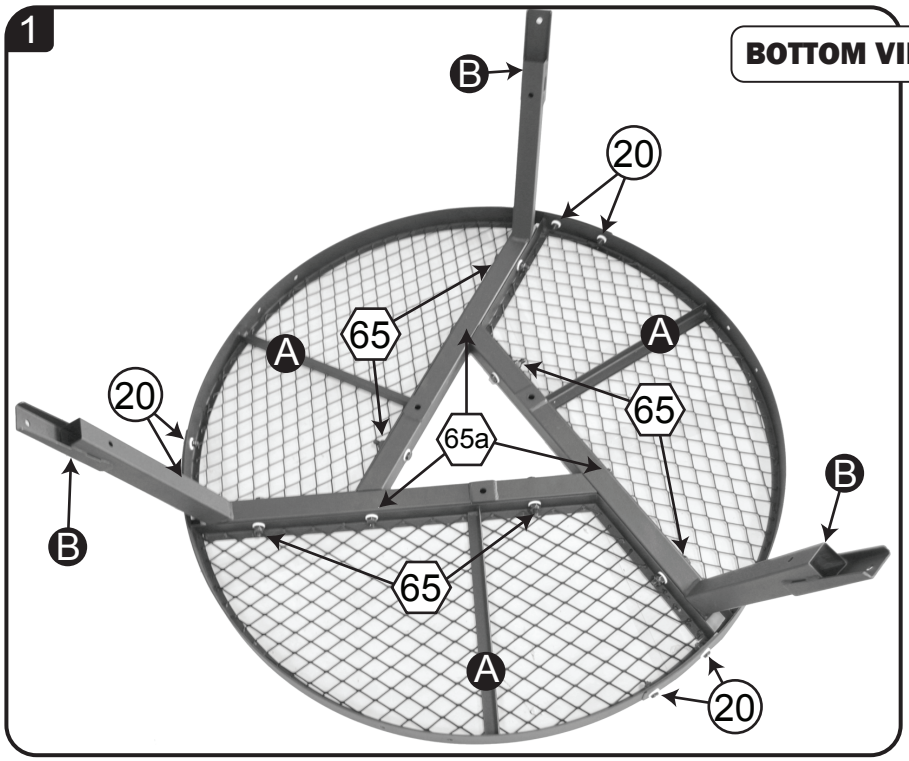

1

Lay Platforms (A) upside down.

Line up each Platform Support (B) between the platforms forming a triangle in the center.

Use ***6-M16x65mm Bolts*** ⟨65⟩ to attach the supports to the platform.

Use ***3-M16x65 Bolts No Nut*** ⟨65a⟩ to attach the Platform Supports to each other.

Attach Platforms together using ***6-M12x20mm Bolts*** (20) on the outside of the frame.

2

Turn Platform assembly over.

Attach Seat Post (J) to the center of the Foot Platform (A) using ***3-M16x65mm Bolts*** ⟨65⟩ .

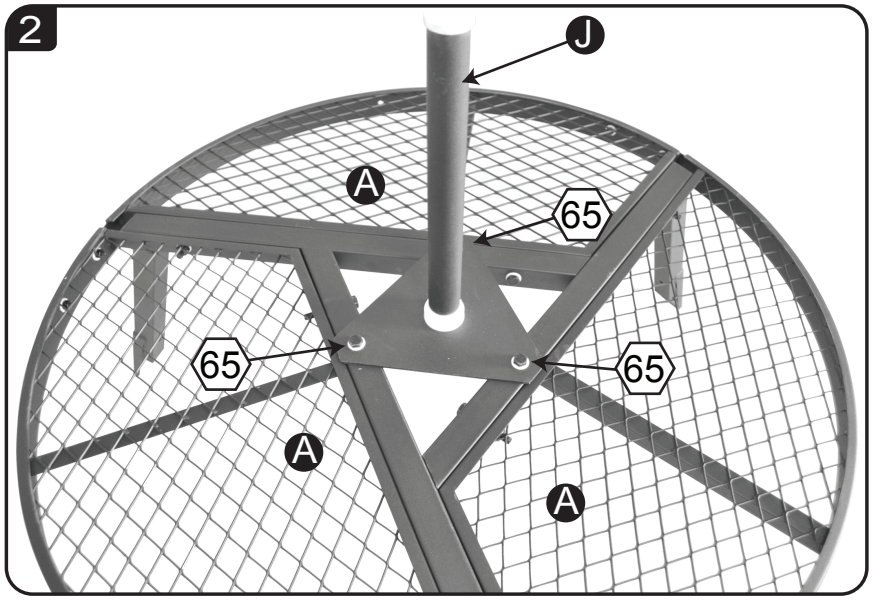

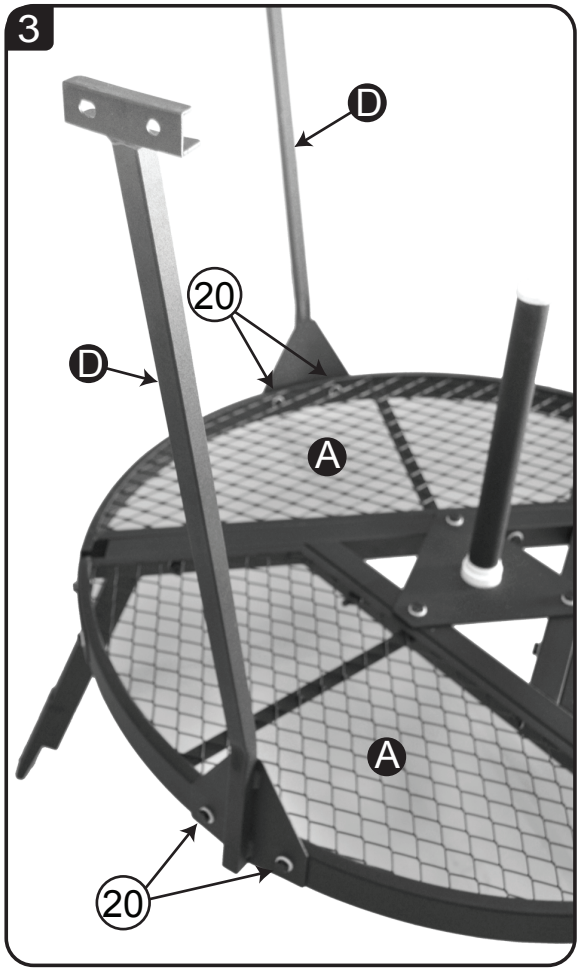

3 Attach Shooting Rail Supports (D) to the outside of the assembled Foot Platform (A) using ***6-M12x20mm Bolts*** (20).

Make sure that the bracket at the top of the support is facing the inside of the stand.

4 Attach each Shooting Rail section (E) to the Shooting Rail Support (D) using ***6-M12x35mm Bolts*** (35).

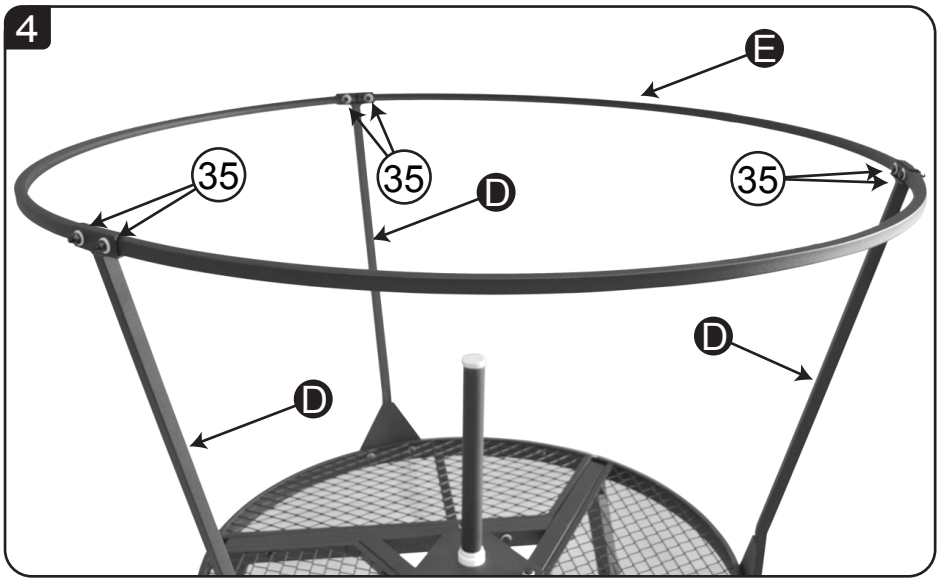

PRIMAL VANTAGE CO.

Distributed by Primal Vantage Company Inc., 2407 W. Euclid Ave., Littleton, CO 80120

©2018 (rev. 3/18)

5 Attach Seat Pedestal Ⓒ to the bottom of Seat Platform Ⓖ using ***4-M12x20mm Bolts*** (20).

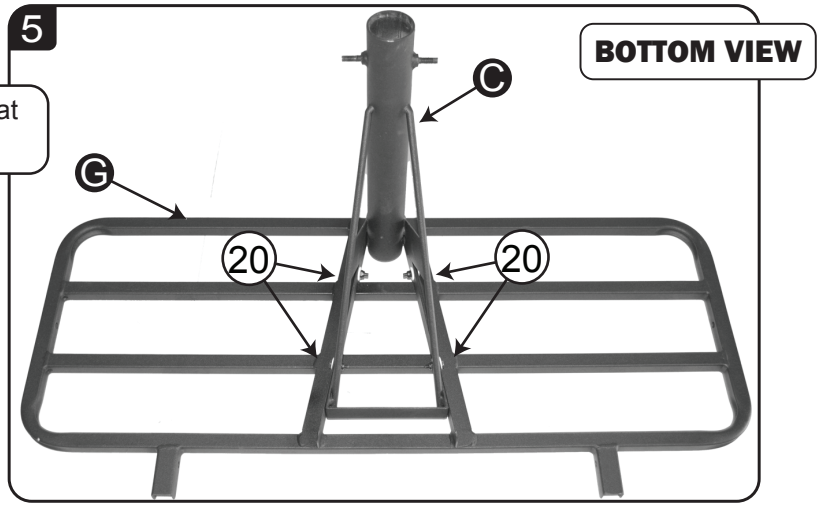

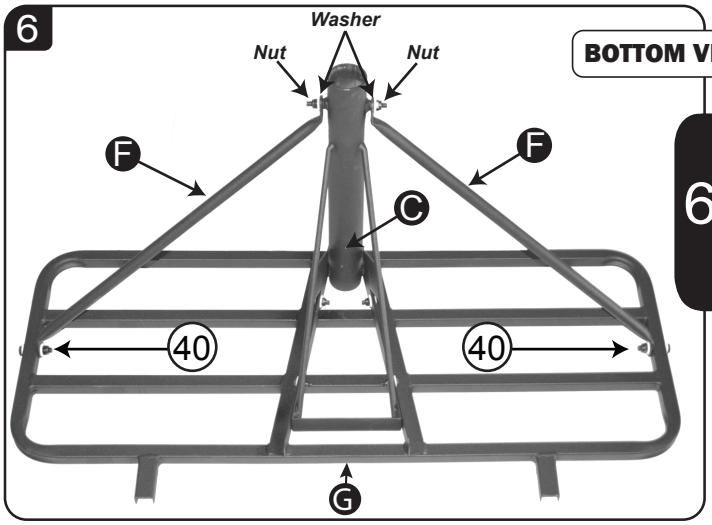

6 Attach Seat Support Bar Ⓕ to the inside of Seat Platform Ⓖ using ***2-M12x40mm Bolts*** (40).

Insert the other end of Seat Support Bar Ⓕ to the bolts on Seat Pedestal Ⓒ and use a washer and nut on each side.

7 Turn Seat Platform assembly back over and place Seat Pedestal Ⓒ over Seat Post Ⓙ.

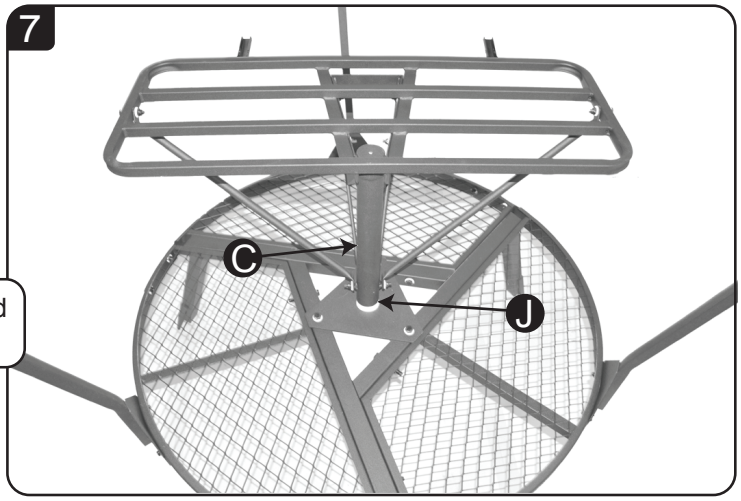

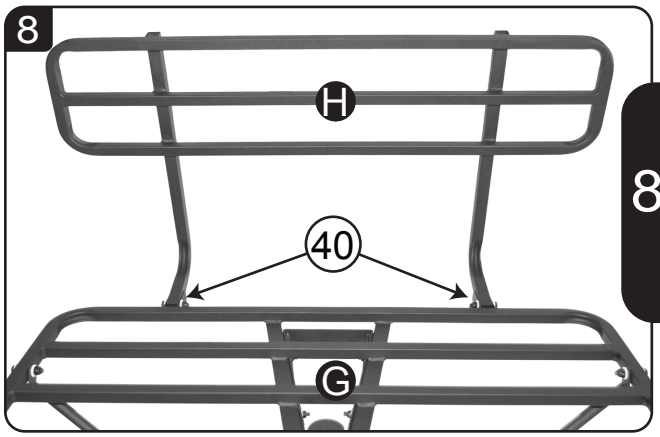

8 Attach Backrest Ⓗ to the brackets at the rear of Seat Platform Ⓖ using ***2-M12x40mm Bolts*** (40).

Now that assembly of the seat platform is complete, go back and tighten all the bolts with a wrench.

Be careful not to overtighten the bolts.

PRIMAL VANTAGE CO.

Distributed by Primal Vantage Company Inc., 2407 W. Euclid Ave., Littleton, CO 80120

©2018 (rev. 3/18)

9 Attach Backrest Cushion (T) to Backrest (H).
Attach Seat Cushion (U) to Seat Platform (G).

You will need the help of at least two other people to attach the legs and ladder sections.

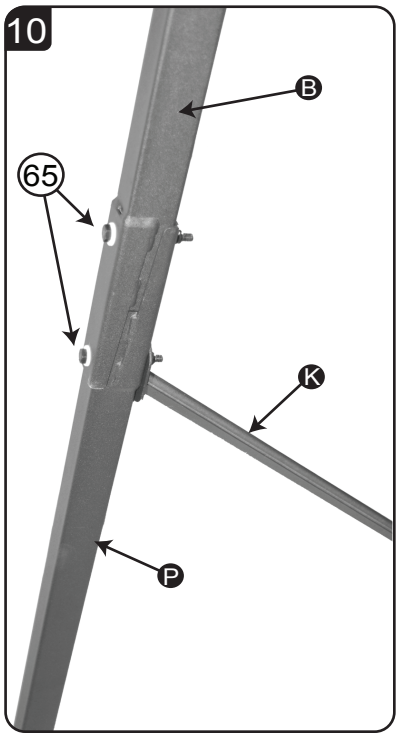

10 Attach one Rear Leg (P) to Platform Support (B) using ***1-M12x65mm Bolt*** (65).

Then attach Upper Cross Brace (K) to the back of Platform Support (B) using ***1-M12x65mm Bolt*** (65).

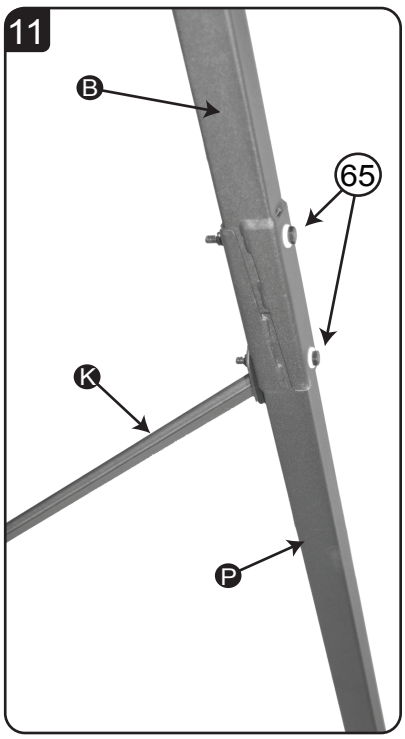

11 Attach one Rear Leg (P) to Platform Support (B) using ***1-M12x65mm Bolt*** (65).

Then attach Upper Cross Brace (K) to the back of Platform Support (B) using ***1-M12x65mm Bolt*** (65).

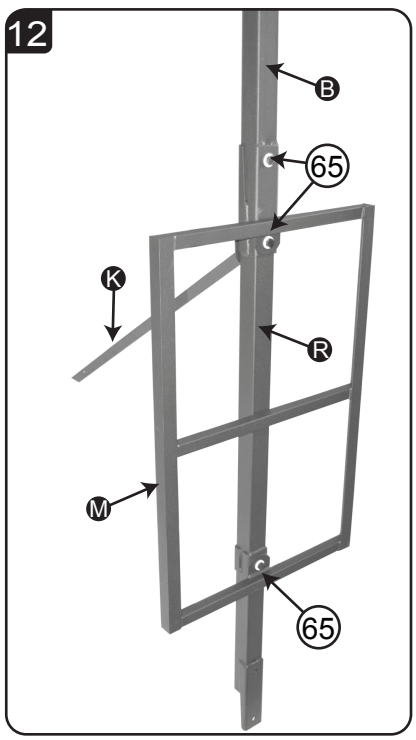

12 Attach one Ladder Leg (R) to Platform Support (B) using ***1-M12x65mm Bolt*** (65).

Then attach the top of Ladder Section (M) to the front of Platform Support (B) and Upper Cross Brace (K) to the back of Platform Support (B) using ***1-M12x65mm Bolt*** (65).

Attach the bottom of Ladder Section (M) to Ladder Leg (R) using ***1-M12x65mm Bolt*** (65).

Make sure that all Upper Cross Braces are pointing towards the ground.

PRIMAL VANTAGE CO.

Distributed by Primal Vantage Company Inc., 2407 W. Euclid Ave., Littleton, CO 80120

©2018 (rev. 3/18)

You will need the help of at least two other people to attach the legs and ladder sections.

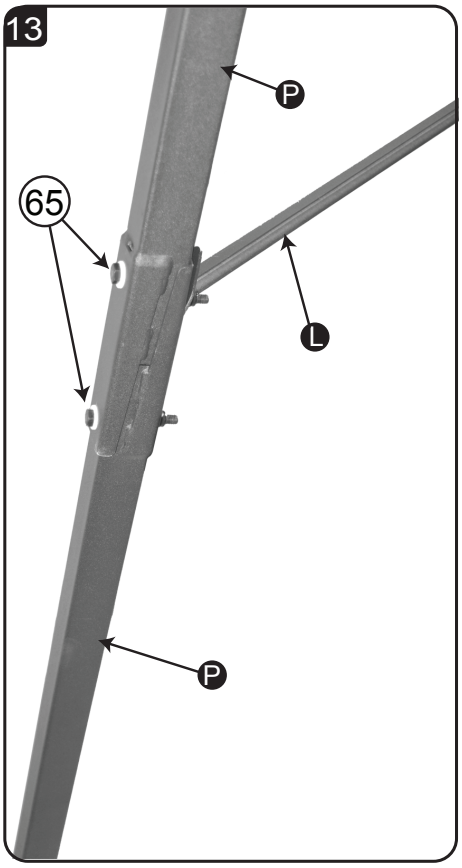

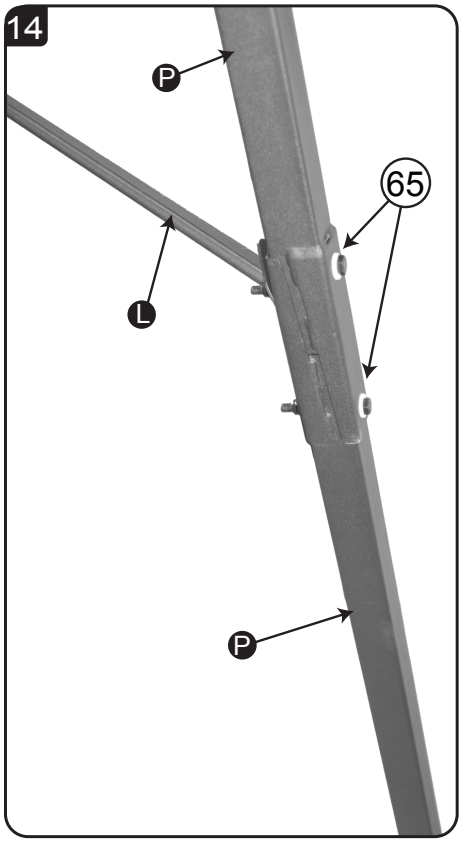

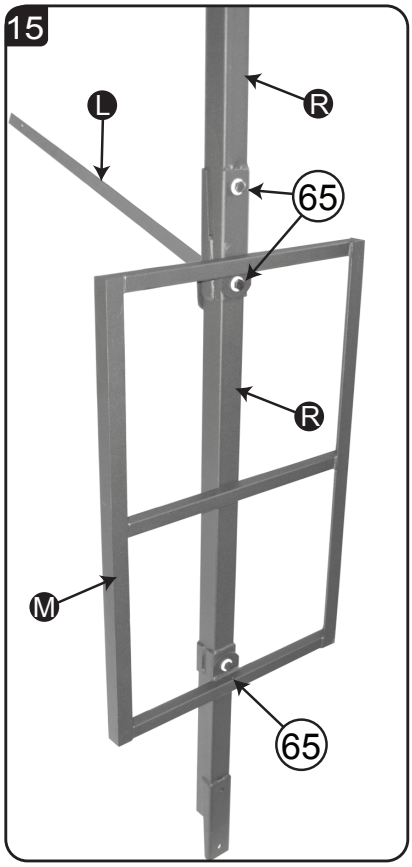

13 Attach one Rear Leg (P) to Rear Leg (P) using ***1-M12x65mm Bolt*** (65).

Then attach Lower Cross Brace (L) to the back of Rear Leg (P) using ***1-M12x65mm Bolt*** (65).

14 Attach one Rear Leg (P) to Rear Leg (P) using ***1-M12x65mm Bolt*** (65).

Then attach Lower Cross Brace (L) to the back of Rear Leg (P) using ***1-M12x65mm Bolt*** (65).

15 Attach remaining Ladder Leg (R) to Ladder Leg (R) using ***1-M12x65mm Bolt*** (65).

Then attach the top of Ladder Section (M) to the front of Ladder Leg (R) and Lower Cross Brace (L) to the back of Ladder Leg (R) using ***1-M12x65mm Bolt*** (65).

Attach the bottom of Ladder Section (M) to Ladder Leg (R) using ***1-M12x65mm Bolt*** (65).

Make sure that all Lower Cross Braces are pointing up.

PRIMAL VANTAGE CO.

Distributed by Primal Vantage Company Inc., 2407 W. Euclid Ave., Littleton, CO 80120

©2018 (rev. 3/18)

16

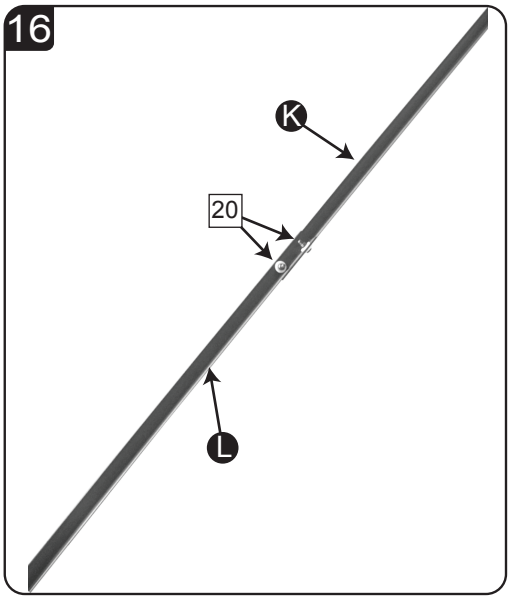

16 Attach each Lower Cross Brace (L) to each Upper Cross Brace (K) with ***2-M10x20mm Bolts*** [20] on each.

17

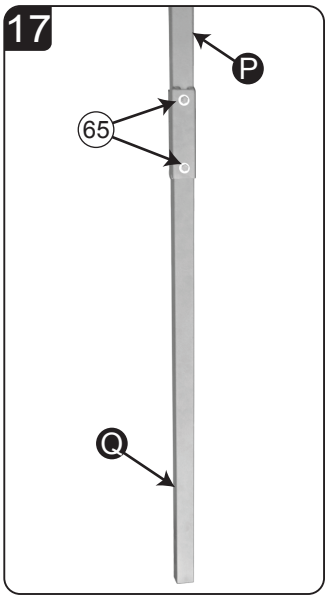

17 Attach Bottom Rear Leg (Q) to Rear Leg (P) using ***2-M12x65mm Bolts*** (65) on each.

18

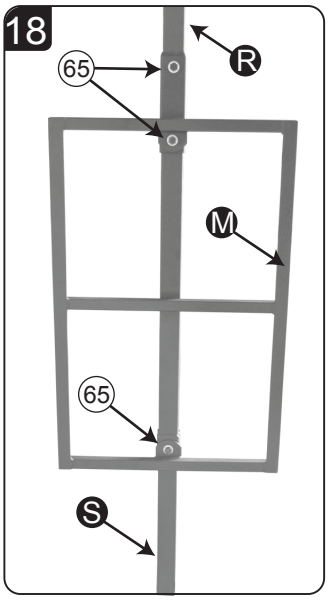

18 Attach Bottom Ladder Leg (S) to Ladder Leg (R) using ***1-M12x65mm Bolt*** (65).
Then attach Ladder Section (M) to the front of Bottom Ladder Leg (S) using ***2-M12x65mm Bolts*** (65).

19

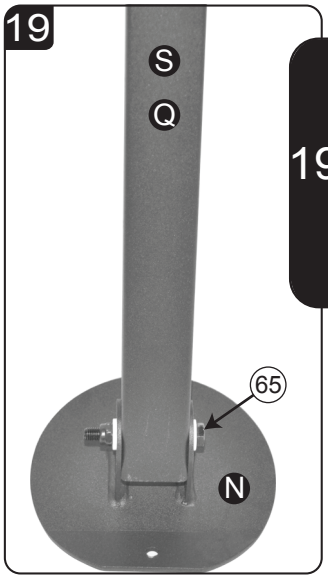

19 Attach Foot (N) to each Bottom Rear Leg (Q) and the Bottom Ladder Leg (S) with ***1-M12x65mm Bolt*** (65) on each.

Make sure that the hole on the Foot is towards the inside of the stand.

20

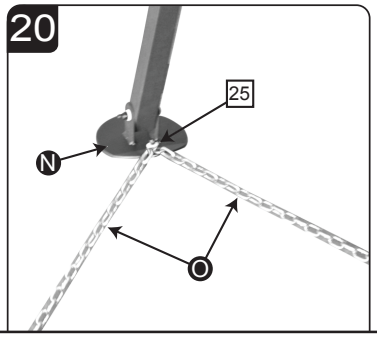

20 Attach one section of Chain (O) to the inside of each Foot (N) using ***1-M10x25mm Bolt*** [25].

21

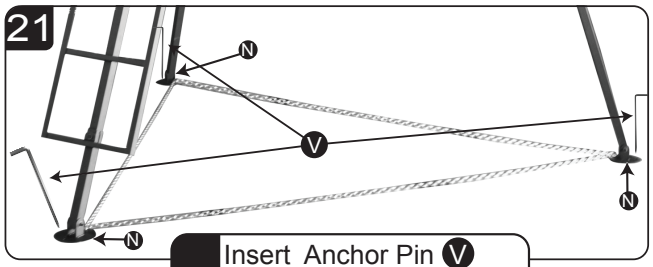

21 Insert Anchor Pin (V) through the hole on each Foot (N) into the ground.

22 Now that assembly is complete, go back and tighten all bolts with a wrench.
Be careful not to over tighten the bolts.

PRIMAL VANTAGE CO.

©2018 (rev. 3/18)

Hunting For Low Prices?

These Items Now Available at Walmart and Walmart.com

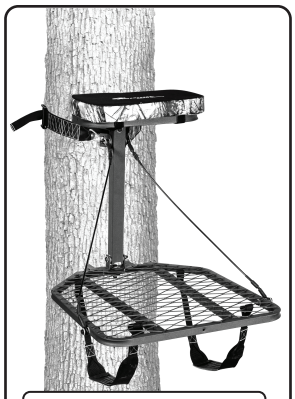

AMERISTEP'S HANG-ON TREESTAND

BIG GAME'S DELUXE ALUMINUM CLIMBER

BIG GAME'S THE PRODIGY HANG-ON TREE STAND

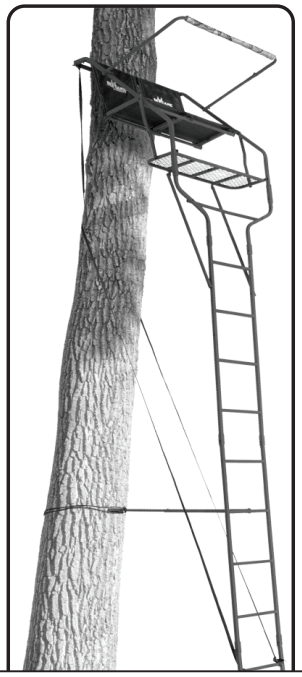

BIG GAME'S THE ENVOY TWO-MAN LADDERSTAND

Check Out Walmart.com For Even More Tree Stands and Accessories

AMERISTEP'S 15' LADDERSTAND

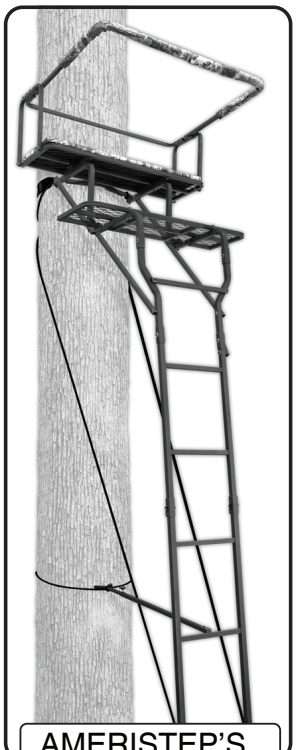

AMERISTEP'S 15' TWO-MAN LADDERSTAND

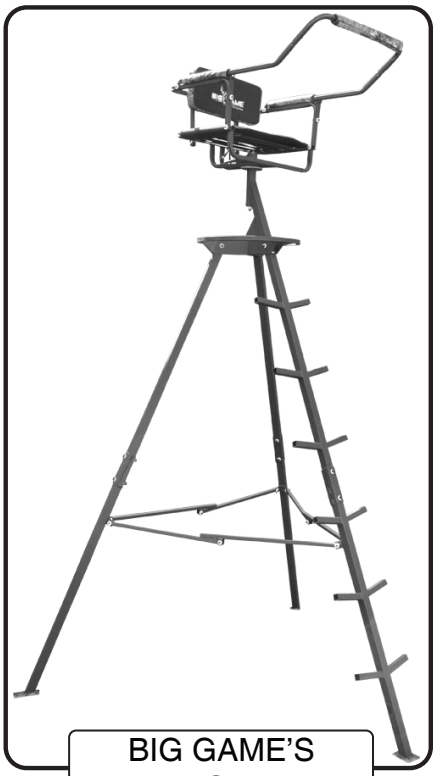

BIG GAME'S 10FT. PORTABLE TRIPOD

AMERISTEP'S 15' TRIPOD

⚠ WARNING

Failure to follow all warnings listed below could result in serious injury or death.

DO NOT use this Tripod without reading and following all warnings and instructions before each use.Failure to do so may result in serious injury or death.
ALWAYS inspect your Tripod before each use and **DO NOT** use if parts are missing, worn, or damaged.
NEVER exceed total weight limit of **500 lbs for two people and equipment or 300lbs. for one person and equipment**. **DO NOT** use if your combined weight with all of your hunting gear and any accessories exceeds **300 lbs.** or the combined weight of two people and equipment exceeds **500 lbs.** Use of tree stand over the weight limit may result in serious injury or death.
NEVER stand on Tripod seat, footrest, armrest, or shooting rail. Standing on any of these parts may cause the Tripod to break or fail resulting in serious injury or death.
NEVER make any alterations or modifications to the Tripod. Doing so may result in serious injury or death and void all warranties.
NEVER use Tripod during inclement weather. **DO NOT** use Tripod during thunderstorms or any other weather conditions that include (but not limited to) lightning, freezing rain, high winds that could create slippery or dangerous conditions.
DO NOT use this Tripod under the influence of alcohol, illegal substances or medication. Using Tripod under the influence of alcohol, illegal substances or medication may result in serious injury or death.
NEVER use Tripod if you have dizzy spells, a heart problem, are afraid of heights, have been advised by a doctor or other health care provider not to climb, or have any condition that would impair your ability to climb up or down or use Tripod as it could result in serious injury or death.
NEVER remove or deface Tripod warning labels. Replacement instructions can be obtained from the address below.

Item #'s BGTS-2MN

Manufactured in the year 2017 by Primal Vantage Co. Inc. 2407 W. Euclid Ave., Littleton, CO 80120 1-866-972-6168

Item #'s BGTS-2MN